

Digital Video Recorder

Quick Guide

CR4000ET

About This Document

This document contains instructions for DVR configuration and operation.

Package Contents

The package contains the following:

- Digital Video Recorder
- Power Adaptor and Power Cord
- Quick User Guide (This Document)
- Software CD (User's Manual included)
- USB Mouse
- Infrared Remote Control


Notice

Specifications are subject to change without prior notice.

The information contained herein is to be considered for reference only.


The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (*OpenSourceGuide\OpenSourceGuide.pdf*).

Warning



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN





WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Symbol	Publication	Description
	IEC60417, No.5032	Alternating current
	IEC60417, No.5031	Direct current

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Placement and Accessories

Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment.

This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment on a closed space. Sufficient amount of ventilation air is necessary to avoid increase of ambient temperature which can cause improper operation or the risk of fire.

7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

8. Power Cords

Operator or installer must remove power and TNT connections before handling the equipment.

9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power-supply cord or the plug has been damaged.

B. If liquid is spilled, or objects have fallen into the equipment.

C. If the equipment has been exposed to rain or water.

D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.

E. If the equipment has been dropped, or the cabinet damaged.

F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

Disposal

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Specifications

Video

Signal Format	NTSC or PAL (Auto Detect)
Video Input	Composite or HD-TVI: 4 inputs, 1 Vp-p, auto-terminating, 75 Ohms
Monitor Outputs	HDMI: 1 HDMI VGA: 1
Video Resolution	HDMI: 1920x1080, 1440x900, 1280x1024 VGA: 1920x1080, 1440x900, 1280x1024
Record Speed	120ips @ 1280x720 (Real-time)
Playback Speed	120ips @ 1280x720 (Full Duplex)

Inputs/Outputs

Alarm Input	4 terminal, programmable as NC or NO, 2.4V (NC) or 0.3V (NO) threshold, 5VDC
Alarm Output	1 relay output, terminal blocks, 2A@125VAC, 1A@30VDC (NO)
Internal Buzzer	78dB at 10cm
Network Connectivity	10/100Mbps, 1Gbps Ethernet (RJ-45)
Audio Input	RCA Input: 4 Line In
Audio Output	RCA Output: 1, Line Out
Text Input	POS Interface, ATM Interface

Connectors

Video Input	Composite or HD-TVI: 4 BNC
Monitor Output	HDMI: 1 HDMI VGA: 1 VGA
Audio In	4 RCA connector
Audio Out	1 RCA connector
Alarm Input/Output	Terminal Blocks
Ethernet Port	RJ-45
RS232 Serial Port	Two-connector terminal block
RS485 Serial Port	Two-connector terminal block
IR Port	1 Remote Control
USB Port	2 (USB 2.0)

Storage

Primary Storage	SATA hard disk drive
Secondary Storage	USB hard disk drive or flash drive

General

Dimensions	11.8" (W) x 2.4" (H) x 9.1" (D) (300mm x 62mm x 232mm)
Unit Weight*	6.39 lbs. (2.9kg)
Shipping Weight*	10.14 lbs. (4.6kg)
Shipping Dimensions	15.4" (W) x 4.4" (H) x 14.2" (D) (390mm x 113mm x 360mm)
Operating Temperature	32°F to 104°F (0°C to 40°C)
Operating Humidity	0% to 90%
Power	Adaptor: input – 100-240V~, 50/60Hz, 1.5A, output – 12V $\overline{\text{DC}}$, 5A
Power Consumption*	12V $\overline{\text{DC}}$, 1.5A, 18W
Approvals	FCC, CE

* When two hard disk drives of 2TB are installed, the value was measured.

Table of Contents


- Installation7
 - Video Input7
 - Audio In/Out.....7
 - Alarm Input/Output7
 - Factory Reset Switch8
 - Video Out.....8
 - Network Port.....8
 - RS232 Port8
 - RS485 Port9
 - Power Cord Connector.....9
- Configuration9
 - Front Panel Buttons and LEDs9
 - IR Remote Control.....11
 - Turning on the Power12
 - Shutting down the System12
 - Initial Unit Setup13
 - Setup Wizard14
- Operation17
 - Live Monitoring17
 - Searching Video18
- Remote Program20
 - WebGuard20
 - iRAS21
 - RAS Mobile.....21

Installation

No special tools are required to install the DVR. Refer to the installation manuals for the other items that make up part of your system.

Your DVR can be used with either NTSC or PAL equipment.

NOTE: You cannot mix NTSC and PAL equipment. For example you cannot use a PAL camera and an NTSC monitor.

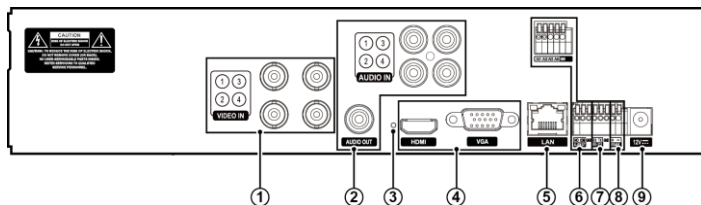

< DVR rear panel >

- | | | |
|---------------|----------------|------------------------|
| ① Video Input | ② Audio In/Out | ③ Factory Reset Switch |
| ④ Video Out | ⑤ Network Port | ⑥ Alarm Input/Output |
| ⑦ RS232 Port | ⑧ RS485 Port | ⑨ Power Cord Connector |

Video Input



Your DVR can record audio from up to four sources. Connect the audio sources to Audio In 1, Audio In 2, Audio In 3 and Audio In 4 as needed using RCA jacks. Connect Audio Out to your amplifier.

Connect the coaxial cables from the video sources to the BNC Video In connectors.

Audio In/Out



Your DVR can record audio from up to four sources. Connect the audio sources to Audio In 1, Audio In 2, Audio In 3 and Audio In 4 as needed using RCA jacks. Connect Audio Out to your amplifier.

NOTE: It is the user's responsibility to determine if local laws and regulations permit recording audio. The DVR does not have amplified audio output, so you will need a speaker with an amplifier. The DVR does not have a pre-amplifier for audio input, so the audio input should be from an amplified source, not directly from a microphone.

Alarm Input/Output



NOTE: To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.

AI 1 to 4 (Alarm-In): You can use external devices to signal the DVR to react to events. Mechanical or electrical switches can be wired to the AI (Alarm-In) and GND (Ground) connectors. The threshold voltage of electrical switches for NC (Normally Closed) is above 2.4V and for NO (Normally Open) is below 0.3V, and should be stable at least 0.5 seconds to be detected. The voltage range of alarm input is from 0V to 5V.

GND (Ground): Connect the ground side of the Alarm input and/or alarm output to the GND connector.

NOTE: All the connectors marked GND are common.

NO (Normally Open): Connect the device to the COM and NO (Normally Open) connector. NO is a relay output which sinks 2A@125VAC and 1A@30VDC.

Factory Reset Switch



 
The DVR has a **Factory Reset** switch to the left of the HDMI connector on the rear panel. This switch will only be used on the rare occasions that you want to return all the settings to the original factory settings.

CAUTION: When using the **Factory Reset**, you will lose any settings you have saved.

To reset the unit, you will need a straightened paperclip:

1. Turn the DVR off.
2. Turn it on again.
3. While the DVR is initializing, the front panel LEDs will blink. When the front panel LEDs blink, poke the straightened paperclip into the unlabeled hole to the left of the HDMI connector.
4. Hold the switch until the DVR's internal buzzer sounds twice.
5. Release the reset switch. All of the DVR's settings are now at the original settings it had when it left the factory.

Video Out



NOTE: Connect the monitor before the DVR boots so that video can be displayed on the monitor with the resolution you have set during system setup. If you want to use both the HDMI and VGA Monitor connectors, one of the monitors should be connected before the DVR boots, and the other monitor should be connected after the DVR boots.

An HDMI (High-Definition Multimedia Interface) connector is provided so that you can use an HDMI monitor as your main monitor.

A VGA connector is provided so that you can use a standard, multi-sync computer monitor as your main monitor. Use the cable supplied with your monitor to connect it to the DVR.

Network Port



The DVR can be networked using the 10Mb/100Mb/1Gb Ethernet connector. Connect a Cat5e cable with an RJ-45 jack to the DVR connector. The DVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades.

CAUTION: The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

RS232 Port



An RS232 port is provided to connect remote control devices such as a control keyboard. PTZ cameras or text-in devices can also be connected to the RS232 port.

RS485 Port



The DVR can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals. The RS485 connector can also be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+/TX+ and RX-/TX- of the control system to the + and - (respectively) of the DVR.

Power Cord Connector




Connect the connector of the adaptor to the DVR, and connect the AC power cord to the adaptor and then to the wall outlet.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. THE POWER CORD HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES IN TO ONE CIRCUIT.

Configuration

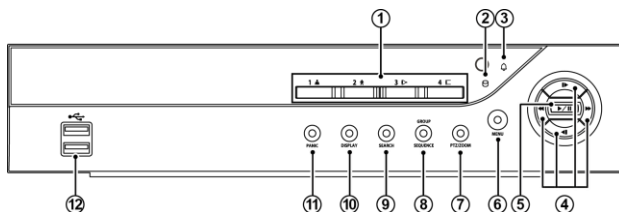

 
 

 
 

 
 

 


 
 

 

 
 

Front Panel Buttons and LEDs



< DVR front panel >


- | | | |
|-------------------|-------------------------|-----------------|
| ① Camera Buttons | ② HDD LED | ③ Alarm LED |
| ④ Arrow Buttons | ⑤ Play/Pause Button | ⑥ Menu Button |
| ⑦ PTZ/Zoom Button | ⑧ Group/Sequence Button | ⑨ Search Button |
| ⑩ Display Button | ⑪ Panic Button | ⑫ USB Connector |

NOTE: A separate Alarm button on the front panel is not provided. Pressing any button on the front panel resets alarm output including the internal buzzer when the alarm is activated. However, when you are in the menu or PTZ mode, you have to exit the menu or PTZ mode first to reset alarm output. The infrared sensor on the DVR is just to the right of the arrow buttons. Make certain that nothing blocks the sensor, or the remote control will not function properly. When you use wireless communication devices (such as Wi-Fi or Bluetooth) near the DVR, the remote control might not function properly. You can also use a USB mouse to navigate through the screens and menus much like you would on a computer.


 
 








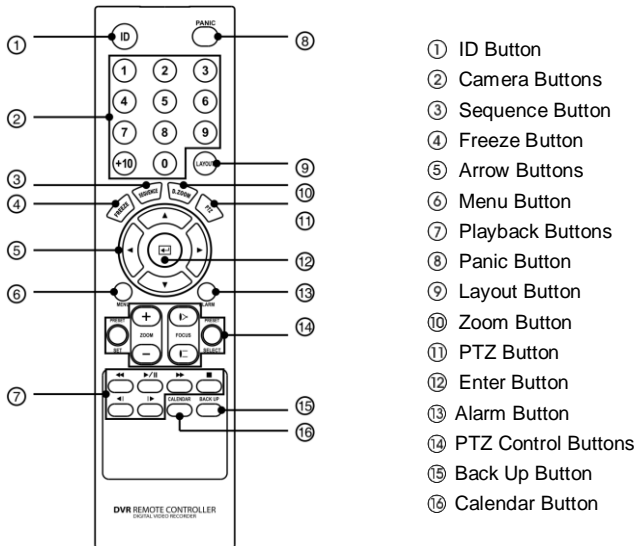


Camera Buttons	<p>Pressing the individual camera buttons will cause the selected camera to display full screen.</p> <p>In the PTZ mode, pressing the button 1 zooms in the screen and the button 2 zooms out the screen, pressing the button 3 focuses near and button 4 focuses far.</p>
HDD LED	The HDD LED flickers when the DVR is recording or searching video on the hard disk drive.
Alarm LED	The Alarm LED is lit when alarm output or internal buzzer is activated.
Arrow Buttons	<p>These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the Up and Down arrow buttons to increase or decrease the number's value.</p> <p>These buttons are also used to control Pan and Tilt when in the PTZ mode. When in the PIP display format, pressing the Up and Down arrow buttons moves the position of the small screen counter-clockwise and clockwise, and pressing the Left and Right buttons changes the PIP screen size.</p> <p>In the playback mode, pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and . Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and . When in the pause mode, pressing the  button moves to the next image and pressing the  button moves to the previous image.</p>
Play/Pause Button	<p>In the live monitoring mode, pressing the  button freezes the current screen and the screen displays  icon. When in the playback mode, pressing the  button plays back images at regular speed or pauses playing video.</p> <p>Pressing the  button selects a highlighted item or completes an entry that you have made during system setup.</p> <p>The LED around the  button is lit when the unit is On.</p>
Menu Button	<p>In the Live Monitoring mode and Search mode, pressing the  button displays the menu icons on the right edge of the screen. Pressing the button again hides the menu icons. During menu setup, pressing the button closes the current menu or setup dialog box.</p> <p>Pressing and holding the button for three seconds or longer enters the cameo mode and allows you to change the screen layout.</p>
PTZ/Zoom Button	<p>Pressing the  button zooms in the current image in double on the screen. You can use the arrow buttons to move the rectangle to another area. Pressing the  button zooms in the image in rectangle.</p> <p>Pressing and holding the button for three seconds or longer enters the PTZ (Pan/Tilt/Zoom) mode and the PTZ icon flickers. Pressing the button again exits the PTZ mode. Pressing the arrow buttons or  button allows you to control properly configured cameras.</p>
Group/Sequence Button	<p>When in the live mode, pressing the  button changes the screen from the current camera group to the next camera group, and the screen displays the page number.</p> <p>Pressing and holding the button for three seconds or longer displays live channels sequentially.</p>
Search Button	<p>Pressing the  button enters the search mode, and pressing the button again exits the search mode. When entering the search mode, video is paused. Pressing the  button plays back video at regular speed.</p> <p>In the Search mode, pressing and holding the button for three seconds or longer allows you to copy video clips.</p> <p>When in one of the multi-view formats, pressing this button enters the Triplex mode. The DVR supports the Triplex function: monitoring, recording and playing back at the same time.</p>

Display Button	Pressing the DISPLAY button toggles between different display formats. The available formats are: PIP and 2x2.
Panic Button	Pressing the PANIC button starts panic recoding of all camera channels, and displays ! on the screen. Pressing the button again will stop panic recording.

   IR Remote Control




 
ID Button	If a DVR System ID is set to 0, the infrared remote control will control that DVR without any additional operations. If the system ID is 1 to 16, you must to press the ID button and then press the number button (1 to 16 (+10 & 6)) in order to control that DVR. If the System ID of two or more DVRs is set to 0, those DVRs will react to the infrared remote control at the same time.
Camera Buttons	Pressing the individual camera buttons will cause the selected camera to display full screen. Buttons are also used to enter passwords.
Sequence Button	When in the Live Monitoring mode, pressing the SEQUENCE button displays live channels sequentially.
Freeze Button	Pressing the FREEZE button freezes the current live screen.
Arrow Buttons	These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the Up and Down arrow buttons to increase or decrease the number's value. These buttons are also used to control Pan and Tilt when in the PTZ mode. When in the PIP display format, pressing the Up and Down arrow buttons moves the position of the small screen counter-clockwise and clockwise. Pressing the Left and Right buttons moves through screen pages in the Live Monitoring mode and Search mode.
Menu Button	In the Live Monitoring mode and Search mode, pressing the MENU button displays the menu icons on the right edge of the screen. Pressing the button again hides the menu icons. During menu setup, pressing the button closes the current menu or setup dialog box.

Playback Buttons	<p>Rewind: Pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and .</p> <p>Play/Pause: Pressing the  button plays back video at regular speed and pressing the button again pauses video.</p> <p>Fast Forward: Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and .</p> <p>Stop: Pressing the  button stops playback and enters the Live Monitoring mode.</p> <p>Backward: When in the pause mode, pressing the  button moves to the previous image.</p> <p>Forward: When in the pause mode, pressing the  button moves to the next image.</p> <p>In the Live Monitoring mode, pressing any playback button enters to the Search mode.</p>
Panic Button	Pressing the PANIC button starts panic recoding of all camera channels, and displays  on the screen. Pressing the button again will stop panic recording.
Layout Button	Pressing the LAYOUT button toggles between different display formats. The available formats are: PIP and 2x2.
Zoom Button	Pressing the ZOOM button zooms the current image on the screen. A PIP with a rectangle temporarily displays showing what area of the screen has been enlarged. You can use the arrow buttons to move the rectangle to another area.
PTZ Button	Pressing the PTZ button enters the PTZ (Pan/Tilt/Zoom) mode which allows you to control properly configured cameras.
Enter Button	The  button selects a highlighted item or completes an entry that you have made during system setup.
Alarm Button	Pressing the ALARM button resets the DVR's outputs including the internal buzzer during an alarm.
PTZ Control Buttons	While in the PTZ mode, the PRESET buttons are used to save Presets and load a Preset View, the ZOOM buttons are used to Zoom In and Zoom Out, and the FOCUS buttons are used for Near Focus and Far Focus.
Back Up Button	Pressing the BACK UP button allows you to copy video clips.
Calendar Button	In the search mode, pressing the CALENDAR button displays the Calendar Search screen.

Turning on the Power

Connecting the power cord to the DVR turns on the unit. The unit takes approximately 50 seconds to initialize.

 
Shutting down the System

Select the System menu → General → System Shutdown and press the  button. The Shutdown screen displays asking you to confirm whether or not you want to shut the system down. After selecting Shutdown in the screen and pressing the  button, a screen will appear telling you when it is safe to disconnect power.

Initial Unit Setup


Before using your DVR for the first time, you will want to establish the initial settings. This includes items such as time and date, display language, camera, remote control, record mode, network and password. Your DVR can be set up using various screens and dialog boxes.

Press the **MENU** button or move the mouse pointer on the right edge of the screen and then select **6** (Login) in the Live Monitoring menu to enter the setup screens. The Login screen appears.



Select a User and enter the password by pressing the appropriate combination of Camera number buttons and then the **▶/||** button. There is no default password when logging in the admin user for the first time. If you do not know the password, click the **?** button for guidance.

Press the **MENU** button or move the mouse pointer on the right edge of the screen and then select **8** (Setup) in the Live Monitoring menu.

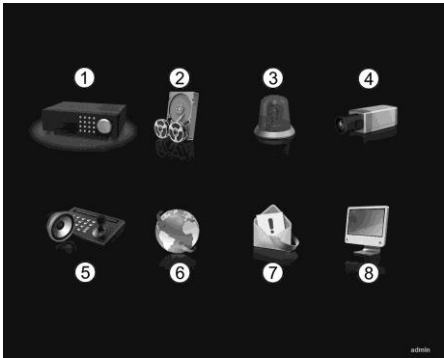

- ① System

② Record

③ Event

④ Camera
- ⑤ Device

⑥ Network


⑦ Notification


⑧ Display

System Setup	Record Setup	Event Setup	Camera Setup
General	General	Motion	General
Date/Time	Schedule	Alarm-In	PTZ
User	Pre-Event	Video Loss	
Storage		Video Blind	
System Event		Text-In	
Device Setup	Network Setup	Notification Setup	Display Setup
Audio	General	Callback	OSD
Alarm-Out	LAN	Mail	Main Monitor
Remote Control	FEN	SNS	
	RTSP	FTP	
	WebGuard	Schedule	
	VNC		
	NetFS		

NOTE: For detailed descriptions of the system setup, refer to the User's Manual on the software CD.

Setup Wizard


Select the **System** menu → **General** → **Wizard** and press the  button. The Wizard setup screen appears. The Wizard setup guides you through configuring the system for basic operation.

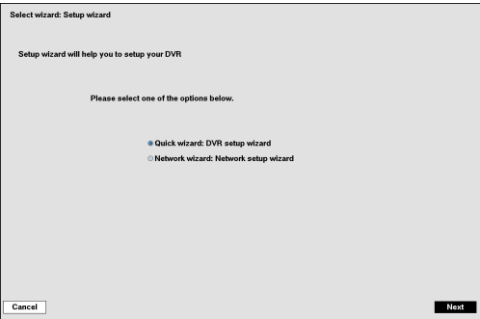

Select either **Quick wizard** or **Network wizard** and select the **Next** button to start the selected setup wizard.



If you selected the **Quick wizard**, selecting the **Next** button starts the **Quick Setup Wizard**.

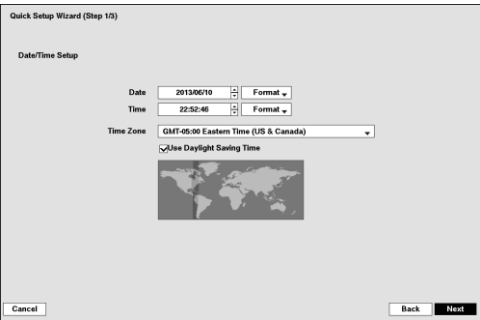

Date/Time Setup

- **Date:** Set the system date and select the date format.
- **Time:** Set the system time and select the time format.
- **Time Zone:** Select your time zone. The Time Zone can be selected on the map.
- **Use Daylight Saving Time:** Selecting the box sets the system to use daylight saving time.

Quick Setup Wizard (Step 2/3)

Record Method Setup

Which recording method would you prefer to use?

☒ Motion Event Record (Recommended)
☐ Continuous & Motion Event Record
☐ Continuous Record

Motion Event Record means that the system will record when a Motion Event is detected. Generally, video quality is more important for Motion Event Recording than it is for Continuous Recording, so the system records at a higher quality for Motion Events.

Cancel Back Next

Record Method Setup

- Select the desired recording mode from:
 - Motion Event Record (Recommended)
 - Continuous & Motion Event Record
 - Continuous Record

Quick Setup Wizard (Step 3/3)

Record Video Quality Setup

Which video quality profile would you prefer to use?

☒ High Video Quality Priority Profile (HVQPP)
☐ Standard Recording Profile (SRP)
☐ Longer Recording Time Priority Profile (LRTPP)

The HVQPP provides the highest video quality recording at that highest frame rate but requires more hard disk space than the LRTPP. Please see the User's Manual for details.

Cancel Back Next

Record Video Quality Setup

- Select the desired video quality profile from:
 - Higher Video Quality Priority Profile
 - Standard Recording Profile
 - Longer Recording Time Priority Profile

Quick Setup Wizard

Now you have completed setup for basic operation.

Click the 'Finish' button to finish the wizard, or click the 'Go to Network Setup' button to start the Network Setup.

Cancel Go to Network Setup Finish

Select the Finish button to finish the Quick Setup Wizard and select the Go to Network Setup button to start the Network Setup.

Network Setup Wizard

Network Wizard will help configure the DVR for your Network.

Please make sure to connect an Ethernet cable between your DVR and Router, or Cable Modem.

The wizard includes:

- LAN Setup
- UPnP (Port forwarding) Setup
- FEN Setup

Click the 'Next' button to start the wizard.

Cancel Next

If you selected the Go to Network Setup, select the Next button to start the Network Setup Wizard.

Network Setup Wizard (Step 1/3)

Internet Connection

Is your DVR connected to the Internet?

☒ Yes (I will use an Internet connection)
☐ No (I will Not use an Internet connection)

Cancel Back Next

Internet Connection

Select whether or not your DVR is connected to the Internet.

Network Setup Wizard (Step 2/3)

LAN Setup

Auto Configuration Test

Get IP, Gateway, Subnet Mask
 Search DNS Server
 Check Internet connectivity
 Search UPnP/PortForwarding

Cancel Back Next

LAN Setup

Select between Auto Configuration and Manual Configuration for network configuration, and then select the Test button to test the network configuration you selected.

Network Setup Wizard (Step 3/3)

FEN Setup

☒ Use FEN

FEN is the technology that automatically sets up your DVR to work seamlessly for remote viewing via your network Internet connection. Simply connect the DVR to your network router and you will be networking in no time! You need to name your DVR FEN to work.

Now enter the DVR name you created to access this DVR.
NO SPACES!

FEN Server dvname.net
 Port 10088 (10000 - 12000)
 FEN Name

Cancel Back Next

FEN Setup

- **FEN Name:** Enter the DVR name to be registered on the FEN server. The FEN Name you entered should be checked by selecting Test, otherwise the FEN changes will not be saved.

Network Setup Wizard

You have now completed your network setup.

Click 'Finish' to complete the setup wizard

Cancel Finish


 

 
 
 









Select the Finish button to finish the Setup Wizard.





 Operation

Live Monitoring

While in the live monitoring mode, pressing the **MENU** button displays the following Live Monitoring menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.




Login/Logout	Selecting  accesses the Login screen, and you will be asked to select a User and enter the password to log into the system. Selecting  displays the Logout screen asking you to confirm whether or not you want to log out the current user.
Display	Selecting  displays the Display Menu. <ul style="list-style-type: none">• Full Screen: Selecting  and choosing the camera number button displays the selected camera full screen.• PIP, 2x2: Selecting  or  displays the cameras in the selected multiview screen mode.• Camera/Status OSD: Selecting Camera OSD or Status OSD toggles Camera OSD or Status OSD On and Off.
Previous/Next Group	Selecting  or  moves to the previous or next page.
Freeze	Selecting  will freeze the current image on the screen until you select  again.
Alarm	Selecting  resets the DVR's outputs including the internal buzzer during an alarm.
Panic	Selecting  starts panic recording of all cameras, and selecting  again stops panic recording.
Sequence	Selecting  causes the cameras to display sequentially, and selecting  again exits the Sequence mode.


Camera Menu	<p>Selecting  displays the Camera Menu.</p> <ul style="list-style-type: none"> • PTZ: Selecting PTZ and choosing the camera number allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. • Zoom: Selecting Zoom and choosing the camera number zooms the current image of the selected camera on the screen. • Audio: Selecting Audio toggles audio output On and Off. • Color Control: Selecting Color Control and choosing the camera number allows you to control brightness, contrast, hue and saturation for each camera for the selected camera. • Edit Group: Selecting Edit Group enters to the Active Cameo mode.
Search	<p>Selecting  displays the Search Menu.</p> <ul style="list-style-type: none"> • All Channels: Selecting All Channels exits the live monitoring mode and enters the search mode. • Triplex: Selecting Triplex enters the Triplex mode.
Setup	Selecting  enters the Main Setup screen.
Status	Selecting  will allow you to check the status of the DVR's system, inputs and storage.





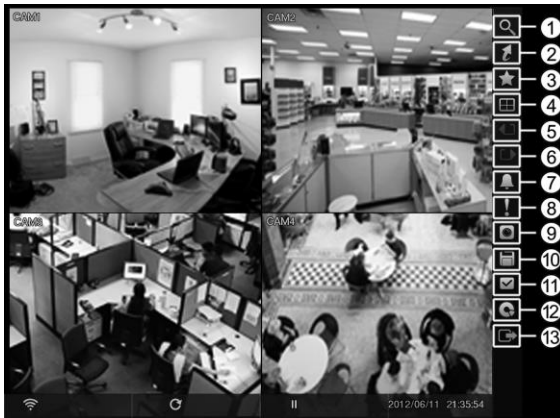










Searching Video

While in the search mode, pressing the **MENU** button displays the following Search menu on the right edge of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.



- ① Search
- ② Go To
- ③ Bookmark
- ④ Display
- ⑤ Previous Group
- ⑥ Next Group
- ⑦ Alarm
- ⑧ Panic
- ⑨ Camera Menu
- ⑩ Export
- ⑪ Status
- ⑫ Data Source
- ⑬ Exit

Search	<p>Selecting  displays the Search menu.</p> <ul style="list-style-type: none"> • Event Log Search: Selecting Event Log Search selects video from the event log. • Record Table Search: Selecting Record Table Search selects using a recording table. • Motion Search: Selecting Motion Search selects motion events. • Text-In Search: Selecting Text-In Search selects text input strings.
---------------	---

Go To	<p>Selecting  displays the Go to menu.</p> <ul style="list-style-type: none"> • Go to the First: Selecting Go to the First displays the first recorded image. • Go to the Last: Selecting Go to the Last displays the last recorded image. • Go to the Date/Time: Selecting Go to the Date/Time allows you to set the date and time you want to search for video.
Bookmark	Selecting  adds the current playback point to the bookmark list.
Display	<p>Selecting  displays the Display Menu.</p> <ul style="list-style-type: none"> • Full Screen: Selecting  and choosing the camera number button displays the selected camera full screen. • Camera/Status OSD: Selecting Camera OSD or Status OSD toggles Camera OSD or Status OSD On and Off.
Previous/Next Group	Selecting  or  moves to the previous or next page.
Alarm	Selecting  resets the DVR's outputs including the internal buzzer during an alarm.
Panic	Selecting  starts panic recording of all cameras, and selecting  again stops panic recording.
Camera Menu	<p>Selecting  displays the Camera Menu.</p> <ul style="list-style-type: none"> • Zoom: Selecting Zoom and choosing the camera number zooms the current playback image of the selected camera on the screen. • Audio: Selecting Audio toggles audio playback On and Off. • Show/Hide Text-In: Selecting Show Text-In or Hide Text-In shows or hides the text-in data on the screen if the video was recorded with text-in data. • Edit Group: Selecting Edit Group enters to the Active Cameo mode.
Export	<p>Selecting  displays the Export menu.</p> <ul style="list-style-type: none"> • A-B Clip-Copy: Selecting A-B Clip-Copy will set the starting point of the video to be clip copied, and the  icon displays at the bottom-left corner of the screen. Selecting A-B Clip-Copy again will set the ending point of the video to be clip copied and displays the Clip-Copy screen. • Clip-Copy: Select Clip-Copy, and the Clip-Copy screen appears to allow clip copy setup. • Print: Selecting Print allows you to print a selected image.
Status	Selecting  will allow you to check the status of the DVR's system, inputs and storage.
Data Source	Selecting  allows you to select the data source to be searched.
Exit	Selecting  exits the search mode and enters the live monitoring mode.

Remote Program

WebGuard

WebGuard allows you to access a remote DVR, monitor live video images and search recorded video using Internet Explorer web browser anytime from virtually anywhere.

Start Internet Explorer on your local PC. You can run the WebGuard program by entering the following information in the address field.

- “http://IP address:port number” (The DVR IP address and the WebGuard port number (default: 12088) set in the Network setup screen (WebGuard tab))
- Or, “http://FEN server address/FEN name” (The FEN server address and the FEN name registered on the FEN server)
- Or, “http://www.dvronline.net” (Entering the DVR IP address or the FEN name will be required when logging in)



Select between the WEBWATCH (Web monitoring) and WEBSEARCH (Web search) modes. Entering ID and PASSWORD and clicking the [LOGIN] button logs in using the selected mode.

You will need to enter the DVR IP address in the DVR ADDRESS field when running the WebGuard program by entering http://www.dvronline.net. Selecting the Use DVRNS option allows you to enter the FEN name registered on the FEN server instead of the IP address. You must enter the FEN server address and port number in the SETUP setting when selecting the Use DVRNS option.



Web Monitoring



Web Search

NOTE: For detailed instructions on operating the WebGuard program, refer to the User's Manual on the software CD.


iRAS

iRAS program, which is designed to be used with remote digital video recorder, is an integrated software program that controls system management, video monitoring, video recording and image playback of multiple remote sites.

CAUTION: If an older version of iRAS software is installed on your computer, a screen appears asking you to upgrade the software. In this case, you are required to upgrade the software according to the instructions in the screen.

Insert the installation CD and install the iRAS software following the instructions.

After installing the iRAS software, run the iRAS program as follows: Go to the Start menu on the PC → Click iRAS → Enter login information.

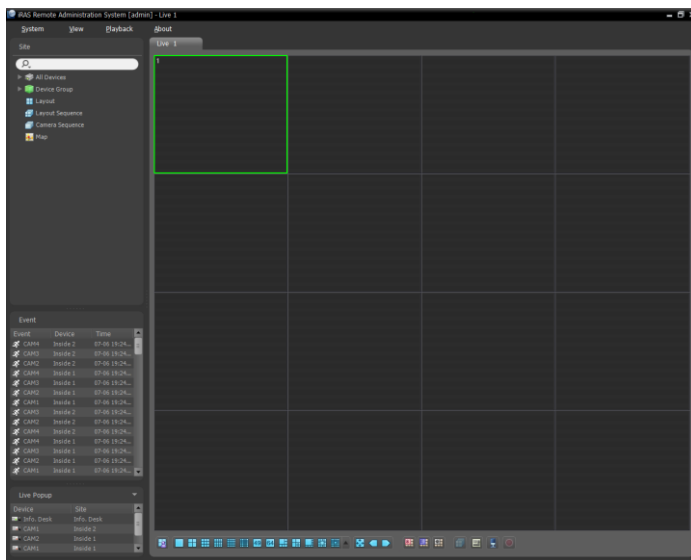


NOTE: For detailed instructions on operating the iRAS program, refer to the User's Manual on the software CD.

RAS Mobile

RAS Mobile allows you to access remote sites and monitor live video using mobile devices anytime from virtually anywhere.


CAUTION: This program uses large amounts of data and you are responsible for all data charges. Please contact your service provider's customer service to confirm or add an unlimited data plan.

Android-based mobile devices

1. Open the Play Store (Google Play)  on your Android device.
2. In Play Store (Google Play), enter RAS Mobile in the search field.
3. Install RAS Mobile and open it.


NOTE: To uninstall RAS Mobile, go to **Settings** → **Applications** → **Manage applications**. Select **RAS Mobile** and press **Uninstall**.

4. Press the Menu button on your mobile device. The following start-up screen will appear.

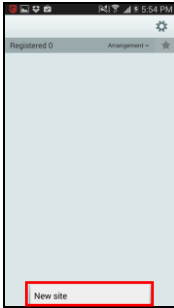

- **New site:** Registers device.
- **Delete site:** Deletes device. Only displayed when a registered device exists.

5. Register the device by pressing **New Site** and entering the device information.

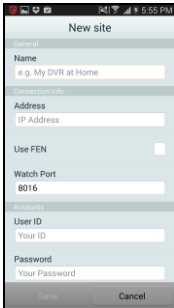



- **General:** Enter a name of the device to be used in RAS Mobile.
- **Connection Info:** Configure FEN, remote address, and remote port settings.
NOTE: Deselect the checkbox if FEN is not enabled on the device. If using a separate FEN server, tap **⚙ (Settings)** to configure FEN server settings. For more details, contact your FEN server administrator.
- **Accounts:** Enter the User ID and Password used to login to the device.

iOS-based mobile devices

1. Open App Store on your device.
2. In App Store, enter **RAS Mobile I** in the search field.
3. Install **RAS Mobile I** and open it.

NOTE: To remove the **RAS Mobile I** program, press and hold the program icon for 2 seconds and then press the **⊗** button.

4. Press the **+** (New Registration) button on the title bar at the top. The following menu will appear.

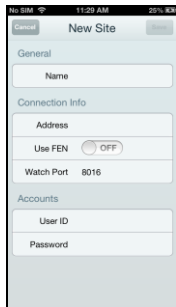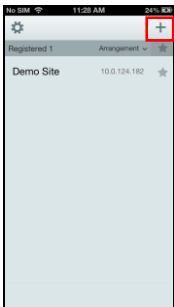

- **General:** Enter a name of the device to be used in RAS Mobile I.
- **Connection Info:** Configure FEN, remote address, and remote port settings.
NOTE: Deselect the checkbox if FEN is not enabled on the device. If using a separate FEN server, tap **⚙ (Settings)** to configure FEN server settings. For more details, contact your FEN server administrator.
- **Accounts:** Enter the User ID and Password used to login to the device.

COSTAR

COSTAR VIDEO SYSTEMS

101 Wrangler, Suite 201 Coppel, Texas 75019

Phone: (469) 635-6800

Fax: (469) 635-6822

Toll-free: (888) 694-7827