


Network Camera

Installation Manual

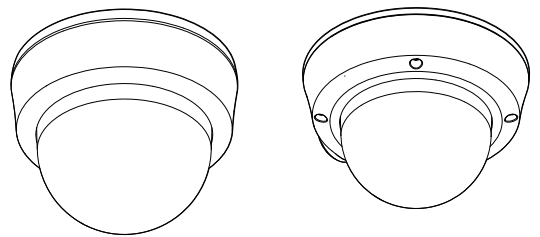

Before reading this manual

This is a basic installation manual for use of a network camera. Users who are using this product for the first time, as well as users with experience using comparable products, must read this operation manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this operation manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this operation manual, keep it at an easily accessible location for future reference.



- The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this manual.
- The information in this document is believed to be accurate as of the date of publication even though explanation about some functions may not be incorporated. The manufacturer is not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.
- It is recommended that first-time users of this network camera and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

Safety Symbols

Symbol	Publication	Description
	IEC60417, No.5031	Direct current

In-Text

Symbol	Type	Description
	Caution	Important information concerning a specific function.
	Note	Useful information concerning a specific function.

Safety Precautions

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Placing and Accessories

Do not place this equipment on a wall or ceiling that is not strong enough to sustain the camera. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment in an enclosed space. Sufficient ventilation is required to prevent an increase in ambient temperature which can cause malfunction or the risk of fire.

7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

This equipment should be remain readily operable.

8. Power Cord

Operator or installer must remove power and TNT connections before handling the equipment.

9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges. If thunder or lightning is common where the equipment is installed, use a surge protection device.

10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have hit the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type.


Replace only with the same or equivalent type.

Dispose of used batteries according to the instructions.

The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

Risk Group1	
	WARNING IR emitted from this product. Do not stare at operating lamp
Product tested against IEC62471	

Warning: This product emits infrared light. Do not look into the IR LED.

FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product
(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Manufacturer reserves all rights concerning this operation manual.

Use or duplication of this operation manual in part or whole without the prior consent of manufacturer is strictly prohibited.

Contents of this operation manual are subject to change without prior notice for reasons such as functionality enhancements.

This product contains software built partially on open-source content. Codes for the corresponding open-source content are available for download. For more information, refer to the software CD (OpenSourceGuide\OpenSourceGuide.pdf) or the open source guide accompanying this operation manual.

Table of Contents

1	Part 1 – Introduction..... 6
	Product Features6
	Accessories.....7
	Overview8
	Dome Cover8
	Body.....9
	Factory Reset12
	Lens13
	I/O Device Port.....13
	Installation15
	Removing the Dome Cover15
	Inserting a SD Memory Card.....16
	Installation.....17
	Closing the Dome Cover.....18
	Angle Adjustment.....19
	Dimensions.....20
2	Part 2 - Camera Connection21
3	Part 3 - Appendix.....22
	Troubleshooting22
	Specifications23

Part 1 – Introduction

Product Features

These cameras are IP-based network cameras that compress and transmit video over ethernet.

You can use the INIT program to change network camera settings or the iNEX Basic program to manage multiple network cameras. In addition, the embedded web server (WebGuard) lets you remotely view live video or scan recorded video using a web browser. In addition, you can use the iNEX Basic to manage network cameras and view/record video.



In this operation manual, the term **Remote System** refers to the computer on which the remote program (iNEX Basic or WebGuard) is running.

- Supports ONVIF protocol (Profile S version 2.4.0)
- Multi-streaming for high-resolution and high-quality video monitoring and simultaneous recording in real-time as well as flexible configurations for those
- Supports H.264 video compression and M-JPEG still image compression algorithms
- Supports 4-stage video compression rate and multiple compression resolutions
- Two-way audio communication support for remote audio dialog
- Video stream buffering to counter pre-/post-event buffering and network delays for improved network recording reliability
- Remote monitoring via web browser or remote software
- Automatic web casting code (HTML) generation
- Up to 10 simultaneous remote monitoring connections

- IP filtering, HTTPS, SSL, IEEE 802.1X, and configurable user authority levels for greater security
- Network bandwidth limitation and MAT features for more efficient use of network bandwidth
- Easy network access via UPnP (Universal Plug and Play) function and embedded mDNS (Multicast DNS) protocol
- Wide dynamic range compensation (Digital WDR) for improved video quality in high-contrast situations
- Slow shutter support for improved low-lighting video capture performance
- Day & Night feature (built-in IR cut filter changer)
- Quick and easy firmware upgrade over the network
- Redundant firmware and auto recovery features for improved system stability
- Network-based integrated management of multiple network cameras
- Multiple event detection modes: Alarm-in, motion detection, trip zone, audio detection, and tampering
- Backup storage on a microSD memory card as a safeguard against data loss during network interruptions
- Supports 12 VDC and PoE (Power over Ethernet)
- Includes a motorized focus and zoom lens
- Video out feature (selectable NTSC/PAL)
- Features a built-in heater for continued use in sub-zero temperature conditions (*Heater supported model*, with the use of a 12 VDC adapter)






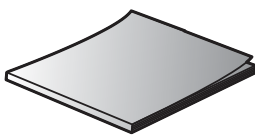




Remote monitoring and recording via multistreaming are available using the iNEX Basic program. For more information on using iNEX Basic, refer to its **operation manual**.



There is a limit to the number of users allowed to connect remotely via the Internet at the same time.

Accessories

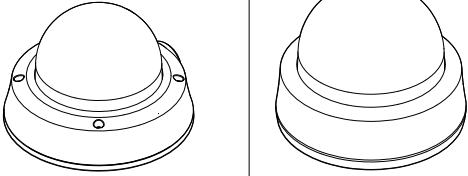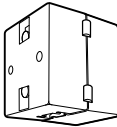Upon purchasing the product, check inside the box to make sure all the following accessories are included. External appearances and colors of the accessories may vary depending on the model.

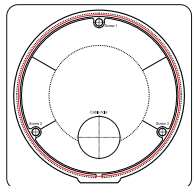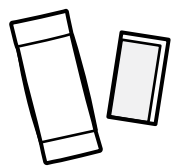		
Network Camera		Ferrite Core
Vandal dome model	Plastic dome model	
		
Installation-CD (INIT/iNEX Basic software, Operation Manuals)		Quick Guide
		
Allen Wrench		Screws, Anchor (3 ea.)
		
Guide Pattern		Desiccant



An allen wrench and desiccant are included with *Vandal Dome* models only.


Overview

✓ Product color and design may vary depending on the model.


Dome Cover

Top

- Vandal Dome Model

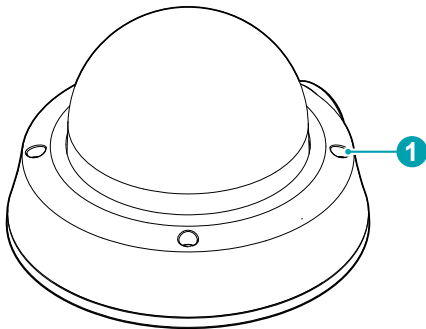


- Plastic Dome Model

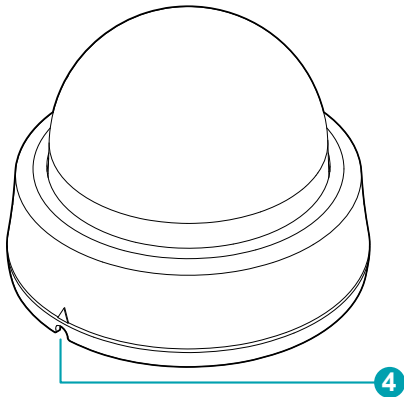


Bottom

- Vandal Dome Model

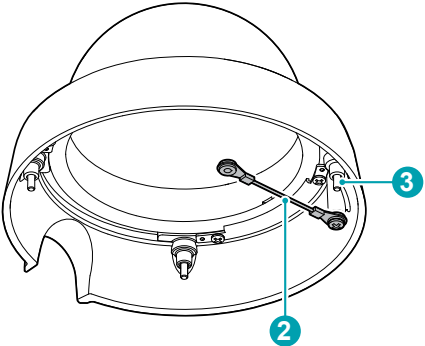

- Plastic Dome Model

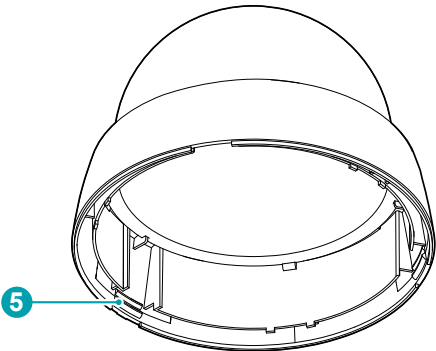


1	Dome Cover Screws Hole
2	Safety Wire
3	Dome Cover Screws
4	Dome Cover Removal Groove
5	Dome Cover Assembly Notch


- **Dome Cover Screws Hole**
For routing cables and wires.
- **Safety Wire**
Prevents the dome cover from falling on to the floor when detached from the camera.
- **Dome Cover Screws**
Secures the dome cover to the camera.
- **Dome Cover Removal Groove**
Use a flat object such as a flat-head screwdriver or coin to remove the dome cover from this groove.
- **Dome Cover Assembly Notch**
Secures the dome cover to the camera.

Body


Heater Supported Model

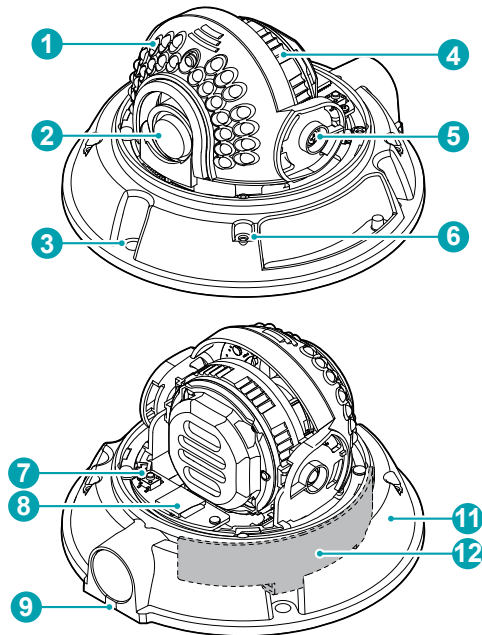


Vandal Dome IR LED Supported Model

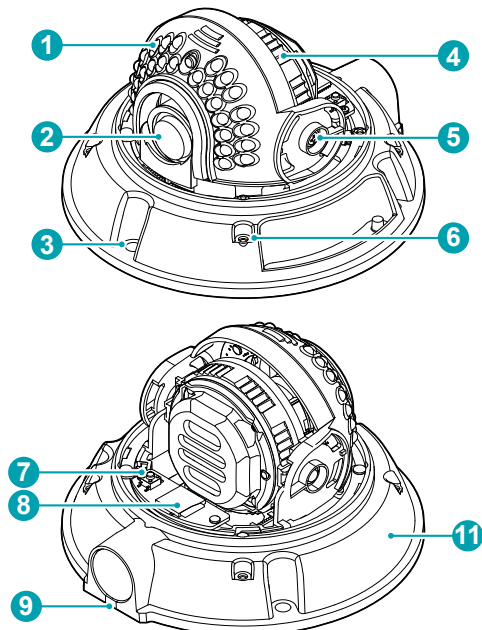


Vandal Dome IR LED Non-Supported Model

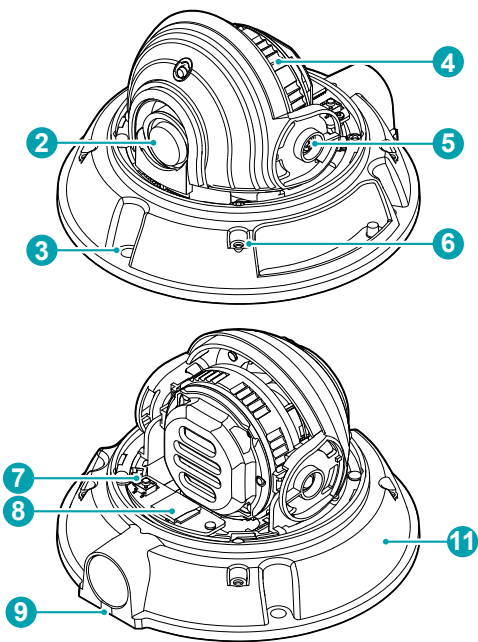

Plastic Dome IR LED Supported Model

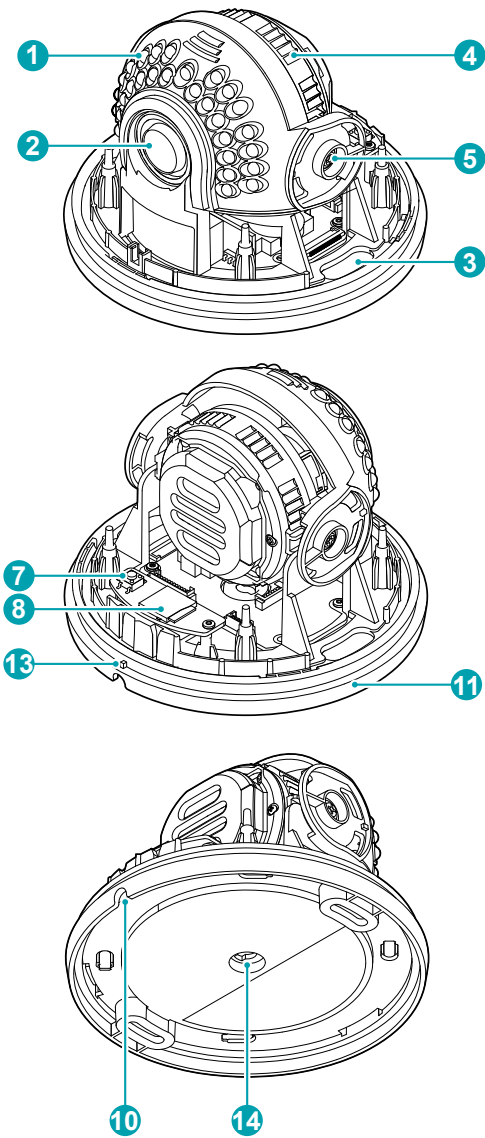

Plastic Dome IR LED Non-Supported Model

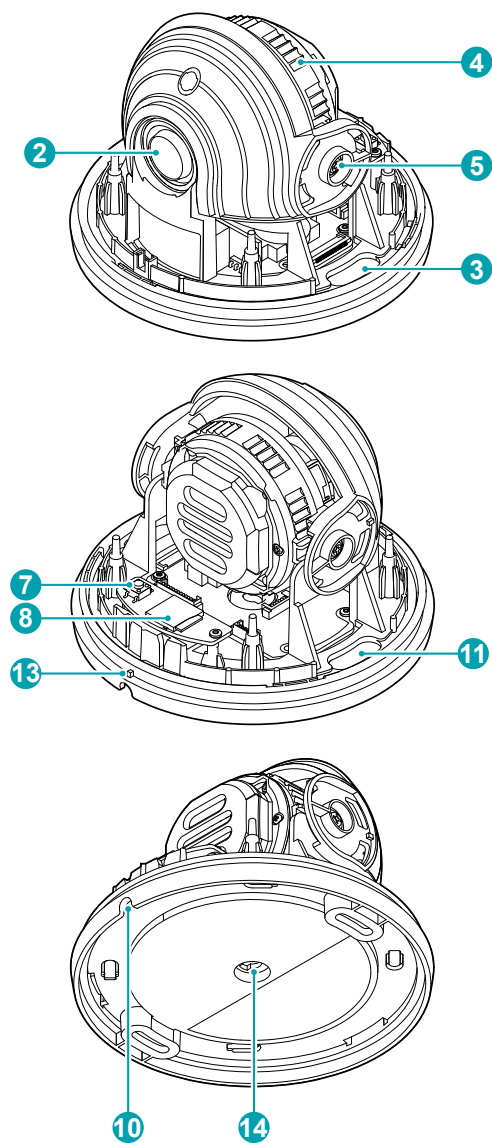

1	IR LED
2	Lens
3	Wall/Ceiling Installation Hole
4	Lens Rotator
5	Vertical Rotation Adjustment Screw
6	Dome Cover Screw Hole
7	Factory Reset Switch
8	SD Memory Card Slot
9	Rubber
10	Side Cable Access Hole
11	Bottom Cover
12	Heater
13	Bottom Cover Securing Point
14	Ceiling Cable Hole

- **IR LED**
A sensor in the middle monitors lighting levels and activates the IR LED during low-lighting conditions.
IR LED supported model only
- **Lens**
A Motorized focus and zoom lens is mounted.
- **Wall/Ceiling Installation Hole**
Used to screw the camera in place on a wall or a ceiling.
- **Lens Rotator**
Turn the lens rotator clockwise or counterclockwise to adjust the lens' rotation angle.
- **Vertical Rotation Adjustment Screw**
Used to adjust the lens' angle and lock it in place.

- **Dome Cover Screw Hole**

Secures the dome cover to the camera.

- **Factory Reset Switch**

Restores the camera's default factory settings. For more information, refer to the **Factory Reset**.

- **SD Memory Card Slot**

Used to insert a microSD memory card into the camera. (An SLC (Single Level Cell) or MLC (Multi Level Cell) card by SanDisk or Transcend is recommended) For more information, refer to the **Inserting a SD Memory Card**.



- Do not remove the SD memory card while the system is in operation. Removing the card while the system is in operation can cause the system to malfunction and/or corrupt data stored on the SD memory card.
- An SD memory card is a consumable product with a finite service life. Prolonged use will damage the card's memory sectors and result in data loss or memory card failure. Test the SD memory card regularly and replace it whenever necessary.

- **Rubber**

Do not remove the rubber.

- **Side Cable Access Hole**

For routing cables and wires.

- **Bottom Cover**

Allows you to install the camera on a wall or a ceiling.

- **Heater**

A built-in heater that enables normal operation in sub-zero temperature conditions.

Heater supported model only



- Requires a 12 VDC power source.

- **Bottom Cover Securing Point**

Align this reference point with the dome cover's reference point to assemble them.

- **Ceiling Cable Hole**

The cables and wires from the device can lead to the ceiling through this hole.

Factory Reset

Only use the factory reset switch to restore the camera to its factory default settings.



A factory reset will clear all camera settings configured by the user.


- 1 Cut off power.
- 2 Press and hold the reset switch using a thin object such as a pin, and resume power supply.
- 3 Release the reset switch 5 seconds after the device turns on.
- 4 The device will go through the resetting process and reboot. All camera settings will be restored to their factory defaults after the reboot.



It's also possible to do a factory reset by pressing and releasing the reset switch while the camera is turned on or using the INIT program from a remote location. A factory reset will reboot the system. For more information on factory reset, refer to the **INIT operation manual**.


Lens

A Motorized focus and zoom lens

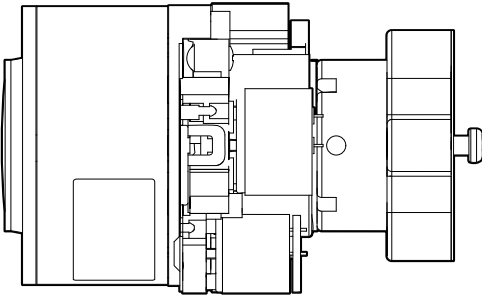

When installing or handling the camera, be careful not to give an impact on the lens to prevent a malfunction from occurring.

I/O Device Port

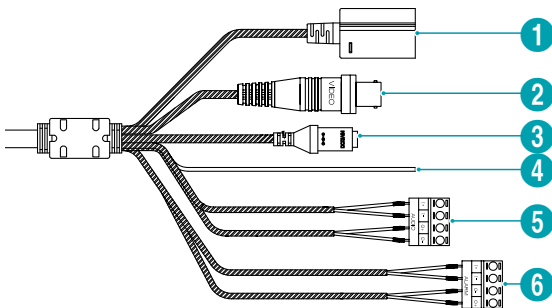

1	Network Port
2	Video Out
3	Power
4	FGND (Frame Ground)
5	Audio In/Out
6	Alarm In/Out

• Network Port

Connect a network cable with an RJ-45 connector to this port. If using a PoE switch, you can supply power to the camera using an ethernet cable. For more information on PoE switch use, refer to the switch manufacturer's operation manual. You can configure, manage, and upgrade this camera and monitor its images from a remote computer over the network. For more information on network connection setup, refer to the [INIT operation manual](#).

• Video Out (CVBS)

Connect the cable's signal line and ground line to these ports and the connector on its opposite end to a monitor. Use these ports for previewing video and not monitoring video. Go to Remote Setup (**System** > **General**) and choose a video out signal. (NTSC or PAL)

• Power (DC12V)

Connect this to the power adapter. A A-type jack is used for the power adapter. (External diameter x internal diameter: 5.5 x 2.5)

• FGND (Frame Ground)

Used to ground the device.


• **Audio In/Out**

- **Out:** Connect an amplifier to this port (line out). This device does not feature a built-in audio amplifier unit and therefore requires the user to purchase a separate speaker system with a built-in amplifier.
- **In:** Connect an audio source to this port. (line in)

• **Alarm In/Out**

- **Out:** It is the BJT (Bipolar Junction Transistor) - open collector output. If the voltage and current exceed the specification limit (Max load: 50mA, Max Voltage: 30VDC), the product could be damaged. When connecting the device which exceeds the specification limit, refer to the picture (circuit) below.

☒ If used with an external inductive load(e.g. relay), a diode must be connected in parallel with the load for protection. Otherwise, the product could be damaged.

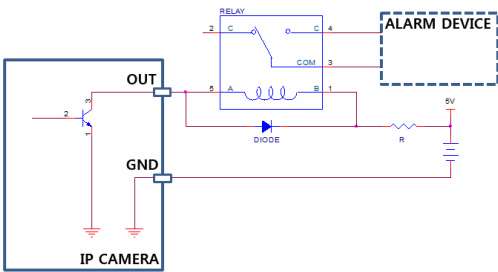


- **In:** Connect an alarm-in device to this port. (Mechanism: Choose between an NC (Normally Closed) type or an NO (Normally Open) type) → Connect a mechanical or electrical switch to the alarm in port and the GND (ground) connector. Alarm in range is 0V to 5V. In order to detect alarm input from an electrical switch, the signal must be higher than 4.3V from an NC switch or less than 0.3V from an NO switch and must last for longer than 0.5 seconds.

☒ The table below shows the network cable specifications.
<The network cable specifications>

Item	Content	Note
Connector	RJ-45	
Ethernet	10/100 Base	10/100 Mbps
Cable	Up to UTP Category 5	
Maximum length	100m	
PoE	IEEE 802.3af, Class 3	



- Check your local laws and regulations on making video or audio recordings. The user will be held liable for any violation of the law. (Article 25-5 of the Personal Information Protection Act: Operators of image data processing devices may not operate such devices for purposes other than as originally intended during device installation, place such devices at locations other than as originally intended, or use such devices to record audio.)
- When switching over from 12 VDC to PoE as the power source, the system will be rebooted once the power adapter is disconnected.
- Ground the power port's frame ground terminal before use.
- Organize the power cable so that it will not cause people to trip over or become damaged from chairs, cabinets, desks, and other objects in the vicinity. Do not run the power cable underneath carpet or a rug or plug the cable into a power outlet shared by a number of other devices.
- To reduce electromagnetic interference, wind the camera-side end of the network cable through the core (Laird Technologies, 28A2024-0A2) provided with the product.

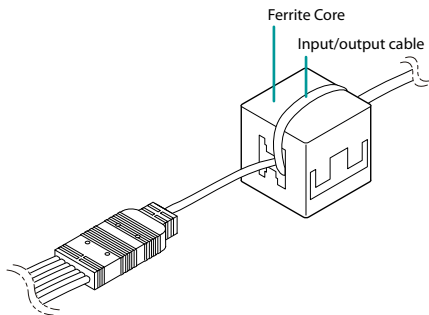

Installation

Installation of this product does not require the use of special tools.

For more information on other devices comprising the overall system, refer to their respective **installation manuals**.




Product color and design may vary depending on the model.


Removing the Dome Cover

Vandal Dome Model

- 1 Loosen the screws counterclockwise using the allen wrench provided with the product.

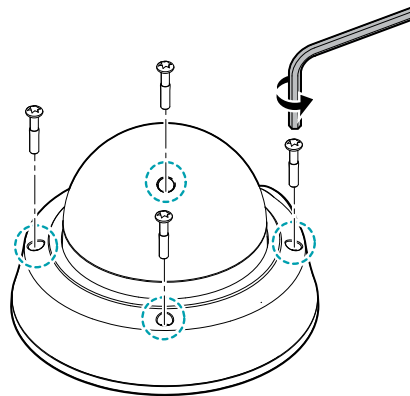


- 2 Remove the dome cover.

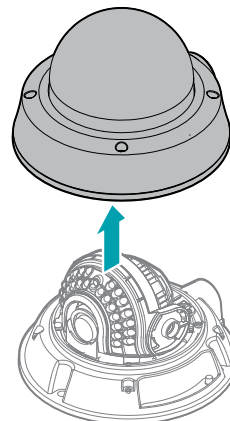


Plastic Dome Model

- 1 Insert a flat-head screwdriver into the groove indicated by the triangle mark on the dome cover, and push down the screwdriver.

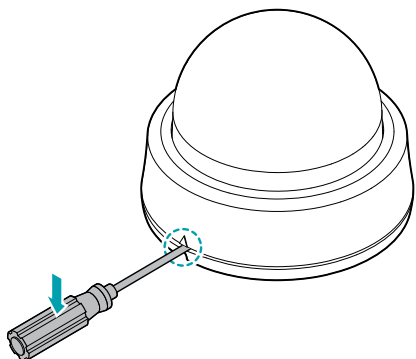


- 2 Remove the dome cover.

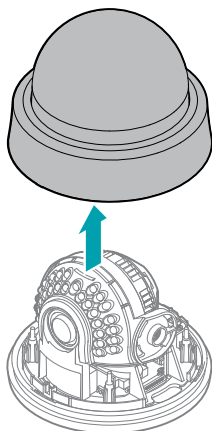

Inserting a SD Memory Card

Vandal Dome Model


Insert a SD memory card into the SD memory card slot with the 'micro SD' print facing upward.

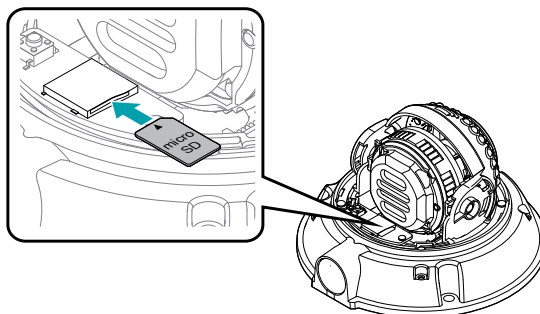

- ☒ Push the SD memory card until it disengages from the slot, and then pull it out.

Plastic Dome Model

Insert a SD memory card into the SD memory card slot with the 'micro SD' print facing upward.

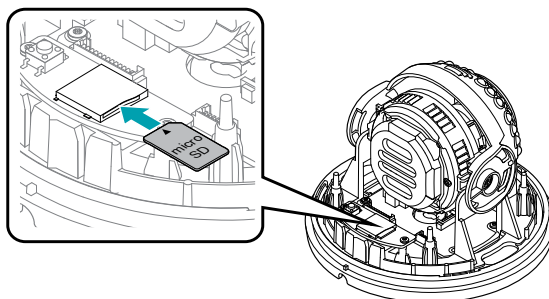

- ☒ Push the SD memory card until it disengages from the slot, and then pull it out.

Installation




- Check the wall or ceiling to see if it needs to be reinforced. The camera may fall off if the wall or ceiling is not strong enough to support its weight.
- Install the camera in a shaded area. If the camera is installed in direct sunlight, it may affect adversely.




- Use the provided guide pattern to check the distance between the screws.

Vandal Dome Model

- 1 Use the screws, anchor provided with the camera to secure the bottom cover on a wall or a ceiling.

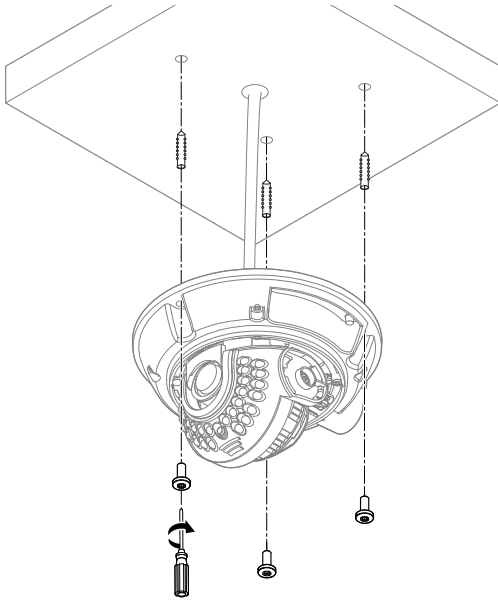

- Attach the enclosed desiccant in the body to prevent moisture.

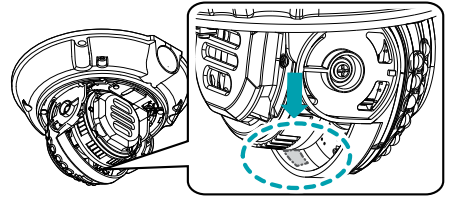

- 2 Connect external devices, the network cable, and the power adapter.




- Make sure to shut the side cable hole using the PT 1/2- inch cable cap for waterproof if the hole is not used.

- 3 Adjust the angle of the lens. For more information, refer to the **Angle Adjustment**.


Plastic Dome Model

- 1 Turn the camera body to align the protrusion on its back with the base's reference point.

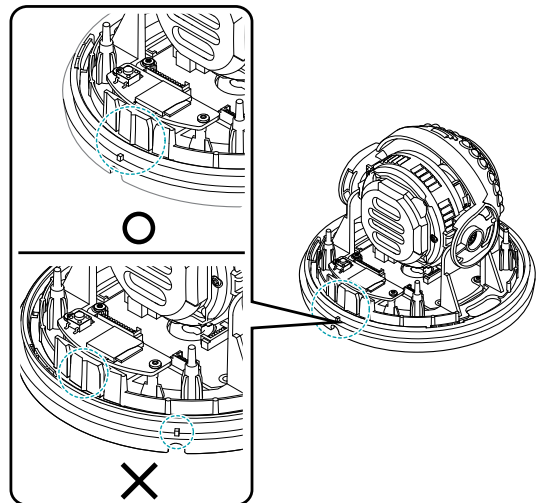

- If the protrusions are not aligned with each other, the screw holes are not revealed.

- 2 Attach the camera body to the wall or ceiling using the installation anchors and screws provided with the camera.

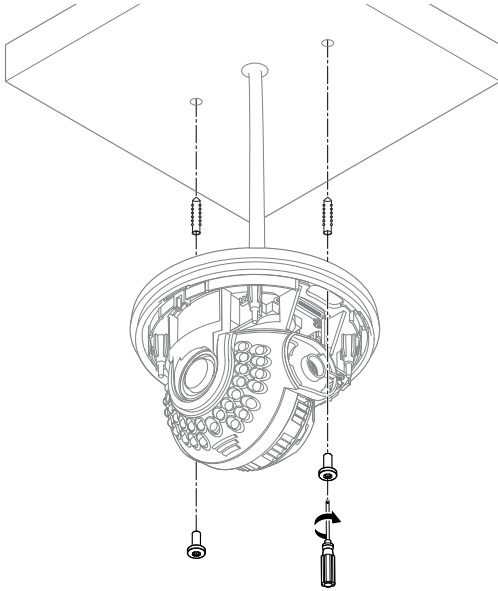


- 3 Connect external devices, the network cable, and the power adapter.
- 4 Adjust the angle of the lens. For more information, refer to the **Angle Adjustment**.


Closing the Dome Cover

Vandal Dome Model

- 1 Attach the dome cover to the bottom cover.

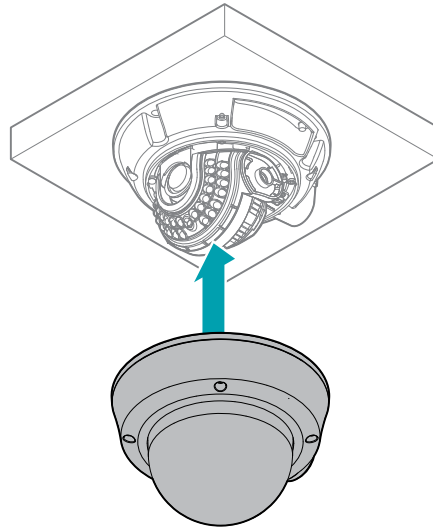


- 2 Fasten the screws for the dome cover clockwise using the allen wrench provided with the camera.

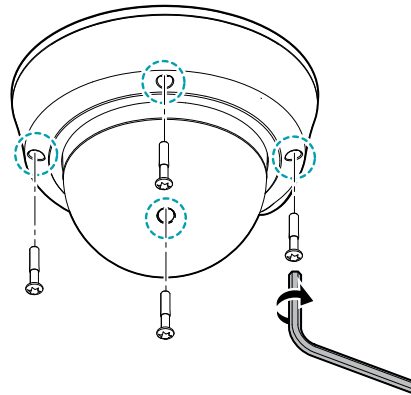


Plastic Dome Model

- 1 Attach the dome cover to the bottom cover.

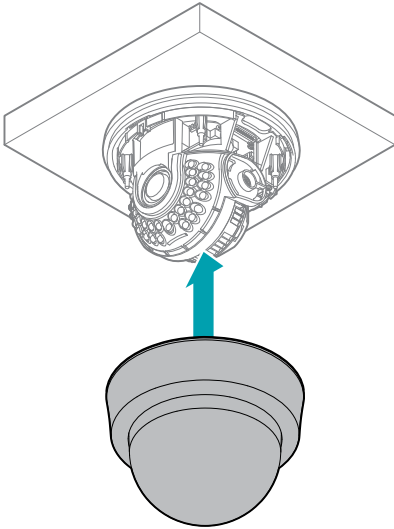


- 2 Press the area where the triangular mark meets the side hole cable to assemble the dome cover.

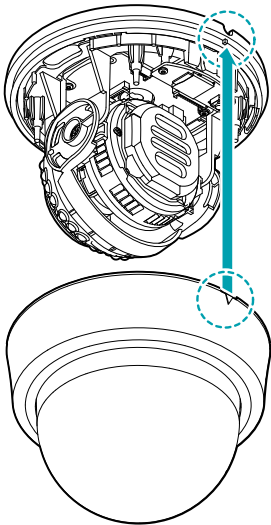


Angle Adjustment

The lens can be rotated along three axes.


Vandal Dome IR LED Supported Model

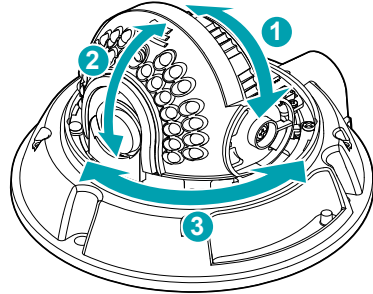


Vandal Dome IR LED Non-Supported Model

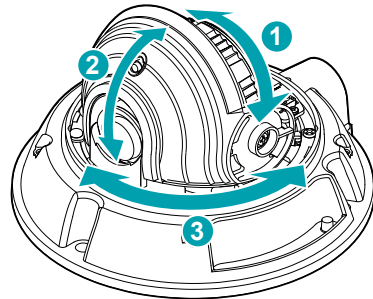

Plastic Dome IR LED Supported Model

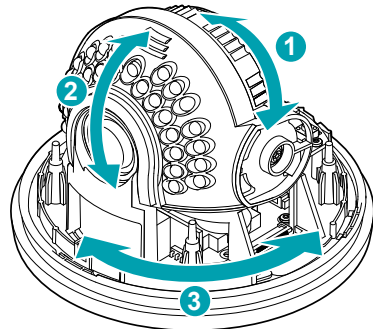

Plastic Dome IR LED Non-Supported Model


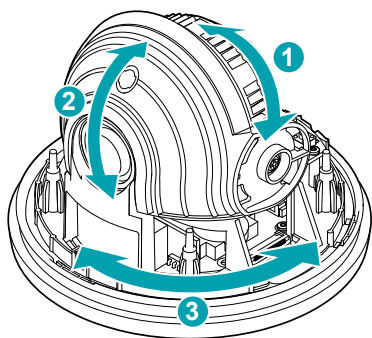


1	Lens Rotation	3	Horizontal Rotation
2	Vertical Rotation		



- **Lens Rotation**
Used to adjust the lens' rotation angle. Turn the rotator in clockwise or counterclockwise direction.
- **Vertical Rotation**
Used to adjust the lens' vertical angle. Loosen the screw, adjust the lens' vertical angle, and then tighten the screw to lock it in place.
- **Horizontal Rotation**
Used to adjust the lens' horizontal angle.
Turn the horizontal rotator in the clockwise or counterclockwise direction.

Dimensions


Vandal Dome Model

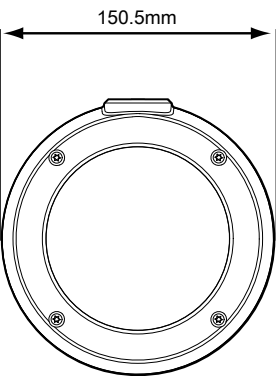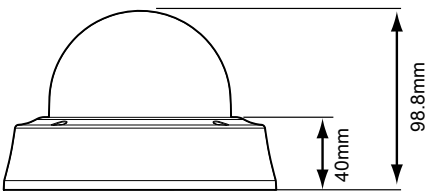

Plastic Dome Model

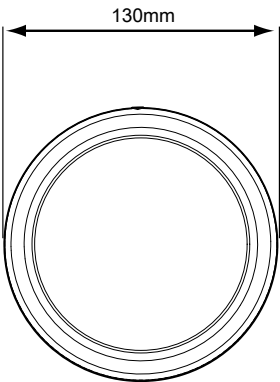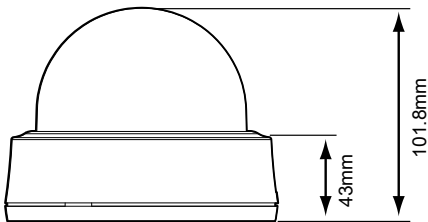

Part 2 - Camera Connection

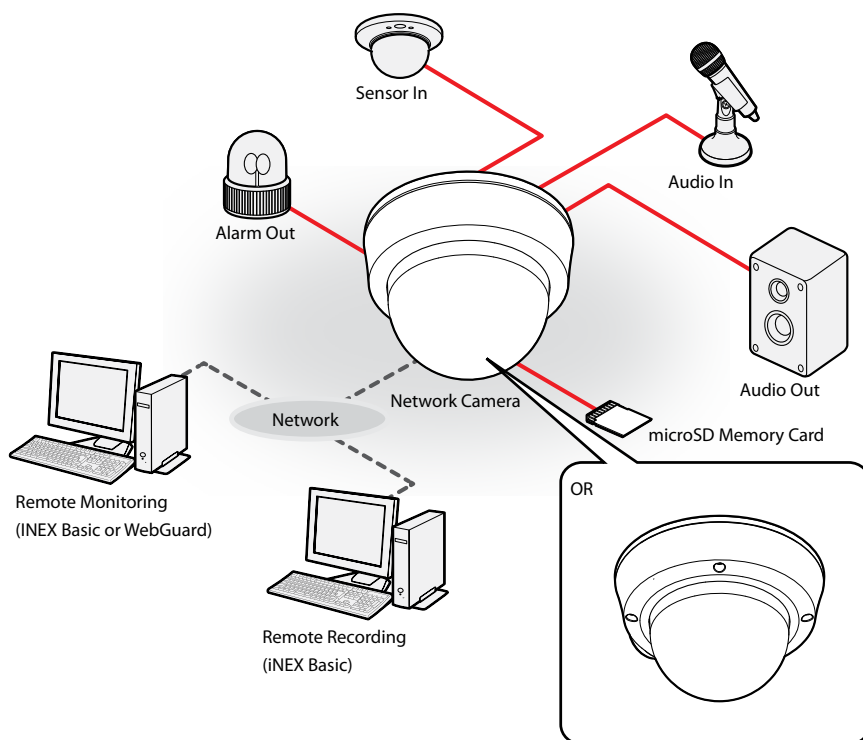

Control the camera over the network from software installed on a computer.
Ideal for using the camera over the network from a remote location.

Part 3 - Appendix

Troubleshooting

Problem	Check
The main unit won't turn on.	<ul style="list-style-type: none">• Check the power cable connection.• Check the power outlet.
PoE switch isn't being recognized.	Check the grounding status of the I/O device connected to the camera and the PoE switch. If they are not grounded, ground them and try again.
I can't see Live videos.	<ul style="list-style-type: none">• Check the camera's power status.• Ensure that cables are properly connected to the camera and the lens.• Check the network connection status of the computer and the network camera.
Images are blurry.	<ul style="list-style-type: none">• Make sure the lens is clean. If not, clean it using a soft piece of cloth or a brush.• Make sure the lens is in focus. Adjust the focus during daytime.• If there is too much light coming into the camera or the camera is picking up an overly bright light source, adjust the camera's position/angle accordingly.
Video color appears incorrect.	Check the white balance settings. If using the Auto option, it may take some time for the white balance to be adjusted.
Images are blinking.	If the camera is pointed at the sun or a fluorescent lamp, adjust the camera's angle away.
Lost the admin ID and password and unable to connect to a network camera.	You must perform a factory reset. A factory reset will revert all settings, including network settings, to their factory defaults. After performing a factory reset, make a memo of the admin ID and password as a safety precaution.
Unable to launch WebGuard.	If the WebGuard login screen is not loading, check which version of Microsoft Internet Explorer you are using. WebGuard may not launch properly on versions 8.0 or below.

Specifications



These product specifications may change without prior notice.

Video

Image Sensor	1/2.8" CMOS
Max. Resolution	1920 x 1080
Scanning Mode	Progressive Scan
Lens type	Motorized Vari-focal
Focal Length	f=3.3mm ~ 10mm
Aperture	F1.3 ~ 2.5
Iris Control	DC Auto Iris
Angular Field of View	Wide : 99.8°(H), 52.2°(V), 118.2°(D) Tele : 33.5°(H), 18.6°(V), 38.3°(D)
Pan/Tilt Range	Pan: -165° ~ 165°, Tilt: 7° ~ 90°, Rotate: -178° ~ 178°
Min. Illumination	COLOR : 0.3 lux @ F1.3 B/W : 0.002 lux @ F1.3
Dynamic Range	> 74.7dB
Electronic Shutter Speed	Auto / Manual (1/30 ~ 1/8,000), Anti-Flicker, Slow Shutter(1/7.5, 1/15)
Day & Night	IR cut filter with auto switch
IR Distance (LEDs)	20 m (28ea)
Video Out *	1 BNC

* Use this port for previewing video and not monitoring video.

Network

Video Compression	H.264(MP), M-JPEG
Bitrate Control	H.264 - CBR / VBR
Max. Frame Rate	30fps : 1920 x 1080
Audio Compression	G.726, G.711
Supported Resolution	1920x1080, 1280x720, 704x480, 352x240
Multi-Video Streaming	Triple
Ethernet	RJ45(10/100BASE-T)
Edge Storage * (Optional)	 (micro SD/SDHC (Class 6 or above, up to 32 GB) memory card)

* An SLC (Single Level Cell) or MLC (Multi Level Cell) card by SanDisk or Transcend is recommended to ensure stable recording performance.

* An SD memory card is a consumable product with a finite service life. Prolonged use will damage the card's memory sectors and result in data loss or memory card failure. Test the SD memory card regularly and replace it whenever necessary.

* MicroSD Logo is a trademark of SD-3C, LLC.

I/O

Audio In/Out	Line-in 1ea / Line-out 1ea
Alarm In	1 TTL, NC/NO Programmable, 4.3V(NC) or 0.3V(NO) threshold, 5V DC
Alarm Out	1 TTL open collector, Max. load: 30mA, Max. voltage: 5VDC

General

Vandal Resistance		Yes (<i>Vandal Dome Model only</i>)
Out-door Ready		IP66 (<i>Vandal Dome Model only</i>), Heater (<i>Heater supported model only</i>)
Operating Temperature		-10°C ~ +50°C (+14°F ~ +122°F) -40°C ~ +50°C (-40°F ~ +122°F) [<i>Heater supported model only</i>]
Boot Up Temperature		0°C ~ +50°C (+32°F ~ +122°F) -20°C ~ +50°C (-4°F ~ +122°F) [<i>Heater supported model only</i>]
Operating Humidity		0% ~ 90%
Power Source		12VDC, PoE(IEEE 802.3af, Class 3)
Power Consumption	IR LED Non-Supported Model	Max. 3.5 W
	IR LED Supported Model	Max. 4.8 W
	Heater Supported Model	14.4W (With heater on DC 12V input)
Approval		FCC, CE
External Dimensions (Ø x H)	Vandal dome model	150.5mm x 98.8mm (5.93" x 3.89")
	Plastic dome model	130mm x 101.8mm (5.12" x 4.01")
Packaging Dimensions (W x H x D)	Vandal dome model	211mm x 186mm x 135mm (8.31" x 7.33" x 5.31")
	Plastic dome model	195mm x 150mm x 130mm (7.68" x 5.91" x 5.12")
Weight (Main Unit)	Vandal dome model	0.98 kg (2.17 lb)
	Plastic dome model	0.43 kg (0.95 lb)
Weight (Packaging)	Vandal dome model	1.25 kg (2.76 lb)
	Plastic dome model	0.75 kg (1.65 lb)

