# Network Camera

Installation Manual



# **Before reading this manual**

This is a basic installation manual for use of a network camera. Users who are using this product for the first time, as well as users with experience using comparable products, must read this operation manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this operation manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this operation manual, keep it at an easily accessible location for future reference.



• The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this manual.

- The information in this document is believed to be accurate as of the date of publication even though explanation about some functions may not be incorporated. The manufacturer is not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.
- It is recommended that first-time users of this network camera and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

# **Safety Symbols**

Symbol	Publication	Description
	IEC60417, No.5031	Direct current

## In-Text

Symbol	Туре	Description	
	Caution	Important information concerning a specific function.	
$\checkmark$	Note	Useful information concerning a specific function.	

# **Safety Precautions**

## WARNING

RISK OF ELECTRIC SHOCK

DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

## **Important Safeguards**

#### 1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

#### 2. Retain Instructions

The safety and operating instructions should be retained for future reference.

#### 3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

#### 4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

#### 5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

#### 6. Placing and Accessories

Do not place this equipment on an wall or ceiling that is not strong enough to sustain the camera. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment in an enclosed space. Sufficient ventilation is required to prevent an increase in ambient temperature which can cause malfunction or the risk of fire.

#### 7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer.

This equipment should be remain readily operable.

#### 8. Power Cord

Operator or installer must remove power and TNT connections before handling the equipment.

#### 9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges. If thunder or lightning is common where the equipment is installed, use a surge protection device.

#### 10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

#### 11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

#### 12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

#### 13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

A. When the power-supply cord or the plug has been damaged.

- B. If liquid is spilled, or objects have hit the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance this indicates a need for service.

#### 14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

#### 15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

#### 16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

#### 17. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment. **Risk Group1** 



WARNING IR emitted from this product. Do not stare at operating lamp

**Warning:** This product emits infrared light. Do not look into the IR LED.

Product tested against IEC62471

# **FCC Compliance Statement**

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE. **WARNING**: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

# WEEE (Waste Electrical & Electronic Equipment)

#### Correct Disposal of This Product (Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Manufacturer reserves all rights concerning this operation manual.

Use or duplication of this operation manual in part or whole without the prior consent of manufacturer is strictly prohibited.

Contents of this operation manual are subject to change without prior notice for reasons such as functionality enhancements.

This product contains software built partially on open-source content. You may obtain the complete corresponding source code depending on whether or not the source is publicly available under a license policy. For more information, refer to **System > General** page. This product includes software developed by the University of California, Berkeley and its contributors, and software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/). Also, this product includes cryptographic software written by Eric Young (eay@ cryptsoft.com).

# **Table of Contents**

1

Part 1 – Introduction		6
Product Features		6
Accessories		7
Overview		8
Body		
Factory Reset		
Installation	•••••••••••••••••	
Removing the Dome Cover.		
Inserting a SD Memory Card		
Installation		
Closing the Dome Cover		
Angle Adjustment		
Dimension		



Part 2 - Camera Connection13		
With DirectNET™ NVR-based Layout	13	
With non DirectNET™ NVR-based Layout	14	



Part 3- Appendix1	15
Troubleshooting	15
Specifications	16

# Part 1 – Introduction

## **Product Features**

This camera is an IP-based network camera that compresses and transmits video over ethernet. You can use the INIT to change network camera settings or the iNEX Basic program to manage multiple network cameras. In addition, the embedded web server (WebGuard) lets you remotely view live video or scan recorded video using a web browser. In addition, you can use the INEX Basic to manage network cameras and view/record video.



In this operation manual, the term **Remote System** refers to the computer on which the remote program (INEX Basic or WebGuard) is running.

- Supports DirectNET mode working with a DirectNET™ NVR that allows users to simply set up all required configurations without a PC
- Supports ONVIF protocol (Profile S)
- Multi-streaming for high-resolution and high-quality video monitoring and simultaneous recording in realtime as well as flexible configurations for those
- Supports H.265, H.264 video compression and M-JPEG still image compression algorithms
- Supports 4-stage video compression rate and multiple compression resolutions
- Video stream buffering to counter pre-/post-event buffering and network delays for improved network recording reliability
- Remote monitoring via web browser or remote software
- Automatic web casting code (HTML) generation
- Up to 10 simultaneous remote monitoring connections

- IP filtering, HTTPS, SSL, IEEE 802.1X, and configurable user authority levels for greater security
- Network bandwidth limitation and MAT features for more efficient use of network bandwidth
- Easy network access via UPnP (Universal Plug and Play) function and embedded mDNS (Multicast DNS) protocol
- Wide dynamic range compensation (True WDR) for improved video quality in high-contrast situations
- Slow shutter support for improved low-lighting video capture performance
- Day & Night feature (built-in IR cut filter changer)
- Quick and easy firmware upgrade over the network
- Redundant firmware and auto recovery features for improved system stability
- Network-based integrated management of multiple network cameras
- · Multiple event detection modes
- Backup storage on a microSD memory card as a safeguard against data loss during network interruptions
- Features a fixed focus lens(mega pixel lens)




Remote monitoring and recording via multistreaming are available using the INEX Basic program. For more information on using INEX Basic, refer to its **operation manual**.



There is a limit to the number of users allowed to connect remotely via the Internet at the same time.

# Accessories


Upon purchasing the product, check inside the box to make sure all the following accessories are included. External appearances and colors of the accessories may vary depending on the model.

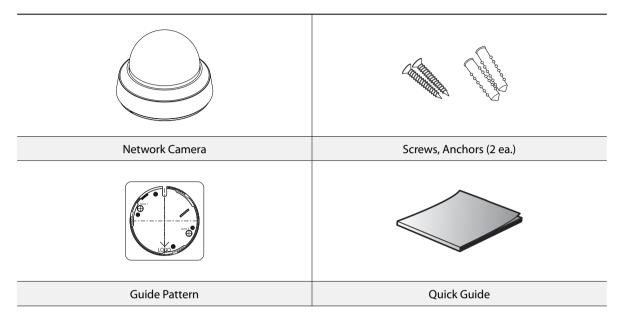

## Overview

Product color and design may vary depending on the model.

## **Dome Cover**

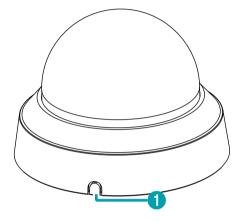


## Side Cable Access

0


• Side Cable Access Hole For routing cables.




## IR LED non-supported model

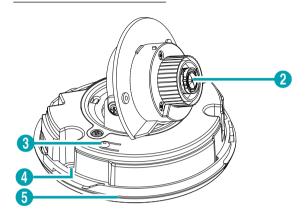

## IR LED supported model

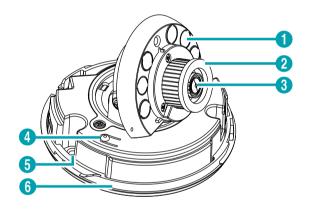

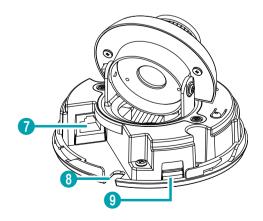

0	IR LED
2	Foam Gasket Ring
3	Lens
4	Factory Reset Button
5	Wall/Ceiling Installation Hole
6	Bottom Cover
0	Network Port
8	Cable Access Hole
9	SD Memory Card Slot

## • IR LED

A sensor inside the system monitors lighting levels and activates the IR LED during low-lighting conditions. *IR LED supported model only* 

## • Lens

Features a fixed focus lens. You can adjust the focus of the lens by turning the lens clockwise or counterclockwise, and a focus fixation spring fixes the lens position.

## Factory Reset Button

Restores the camera's default factory settings. For more information, refer to the **Factory Reset**.

## Wall/Ceiling Installation Hole

Used to screw the camera in place on a wall or a ceiling.

## Bottom Cover

Allows you to install the camera on a wall or a ceiling.

## Network Port

Connect a network cable with an RJ-45 connector to this port. If using a PoE switch, you can supply power to the camera using an ethernet cable. For more information on PoE switch use, refer to the switch manufacturer's operation manual. You can configure, manage, and upgrade this camera and monitor its images from a remote computer over the network. For more information on network connection setup, refer to the **INIT operation manual**.

The table below shows the network cable specifications.

ltem	Content	Note
Connector	RJ-45	
Ethernet	10/100 Base	10/100 Mbps
Cable	UTP Category 5e or higher	
Maximum length	100m	
PoE	IEEE 802.3at, Class 3	

## Cable Access Hole

For routing cables.

## • SD Memory Card Slot

Used to insert a microSD memory card into the camera. (An SLC (Single Level Cell) or MLC (Multi Level Cell) card by SanDisk or Transcend is recommended)

	•	Do not remove the SD memory card while the
$\checkmark$		system is in operation. Removing the card while
	,	the system is in operation can cause the system
		to malfunction and/or corrupt data stored on
		the SD memory card.

 An SD memory card is a consumable product with a finite service life. Prolonged use will damage the card's memory sectors and result in data loss or memory card failure. Test the SD memory card regularly and replace it whenever necessary.

# **Factory Reset**

Only use the factory reset button to restore the camera to its factory default settings.



A factory reset will clear all camera settings configured by the user.

- 1 Shut off the power supply.
- 2 Remove the dome cover.
- 3 Press and hold the reset button down
- **4** Hold the button down and apply the power.
- 5 Once the device turns back on, wait 5 seconds and then release the reset button.
- 6 The device will go through the resetting process and reboot. All camera settings will be restored to their factory defaults after the reboot.

It's also possible to do a factory reset by pressing and releasing the reset button while the camera is turned on or using the INIT from a remote location. A factory reset will reboot the system. For more information on factory reset, refer to the **INIT operation manual**.

## Installation

Installation of this product does not require the use of special tools.


For more information on other devices comprising the overall system, refer to their respective **installation manuals**.




Product color and design may vary depending on the model.

## **Removing the Dome Cover**

1 Turn the dome cover counterclockwise.




2 Remove the dome cover.

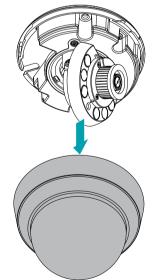

## **Inserting a SD Memory Card**

Insert a SD memory card into the SD memory card slot with the 'micro SD' print facing upward.

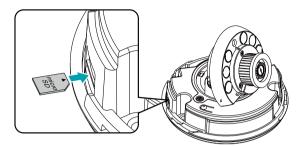

Push the SD memory card until it disengages from the slot, and then pull it out.

# Installation


- Check the wall or ceiling to see if it needs to be reinforced. The camera may fall off if the wall or ceiling is not strong enough to support its weight.
  - Install the camera in a shaded area. If the camera is installed in direct sunlight, it may affect adversely.



Use the provided guide pattern to check the distance between the screw holes if necessary.

1 Use the screws, anchor provided with the camera to secure the bottom cover on a wall or a ceiling.


- 2 Connect external devices, the network cable, and the power adapter.



- 3 Adjust the angle. For more information, refer to the Angle Adjustment.
- 4 Adjust the focus.

# **Closing the Dome Cover**


Attach the dome cover to the bottom cover. Turn the dome cover clockwise to fasten the dome cover.

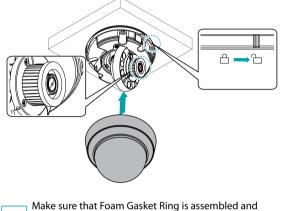

Make sure that Foam Gasket Ring is assembled and firly pressed against the camera dome cover, otherwise it will create **halo** effect by IR light reflection into lens.

# Angle Adjustment

The lens can be rotated along three axes.

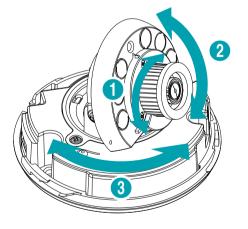

0	Lens Rotation	3	Horizontal Rotation
2	Vertical Rotation		

## Lens Rotation

Used to adjust the lens' rotation angle. Turn the rotator in clockwise or counterclockwise direction.


## Vertical Rotation

Used to adjust the lens' vertical angle. Turn the rotator in clockwise or counterclockwise direction.

## Horizontal Rotation

Used to adjust the lens' horizontal angle. Turn the horizontal rotator in the clockwise or counterclockwise direction.


# Dimension

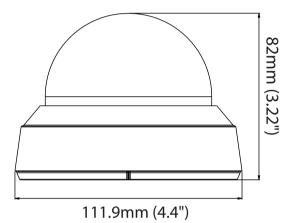

# Part 2 - Camera Connection

Use the camera by connecting to DirectNET<sup>™</sup> NVR or non DirectNET<sup>™</sup> NVR, VMS such as INEX Basic.




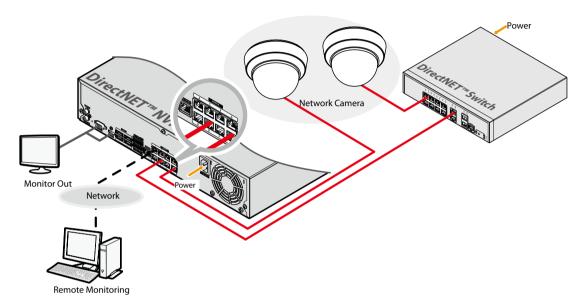

DirectNET<sup>™</sup> NVR makes it easy to use cameras without extra network configurations. Each camera can be controlled via the DirectNET<sup>™</sup> NVR setup menu, without any PC. For detailed camera settings, please see the camera setting pages of DirectNET<sup>™</sup> NVR manual.

For users using the camera with DirectNET<sup>™</sup> NVR connection, do not need to consider contents in the camera operation manual.

# With non DirectNET<sup>™</sup> NVR-based Layout

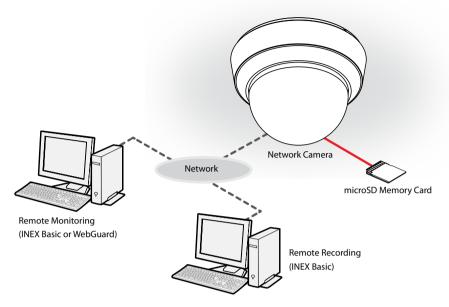

Control the camera over the network from software installed on a computer.

The contents in the camera operation manual are only for users using the camera with non DirectNET<sup>™</sup> NVR connection or VMS connection such as INEX Basic.

# Troubleshooting

Problem	Check
The main unit won't turn on.	<ul><li>Check the power cable connection.</li><li>Check the power outlet.</li></ul>
PoE switch isn't being recognized.	Check the grounding status of the I/O device connected to the camera and the PoE switch. If they are not grounded, ground them and try again.
l can't see Live videos.	<ul> <li>Check the camera's power status.</li> <li>Check the network connection status of the computer and the network camera.</li> </ul>
lmages are blurry.	<ul> <li>Make sure the lens is clean. If not, clean it using a soft piece of cloth or a brush.</li> <li>Make sure the lens is in focus. Adjust the focus during daytime.</li> <li>If there is too much light coming into the camera or the camera is picking up an overly bright light source, adjust the camera's position/angle accordingly.</li> </ul>
Video color appears incorrect.	Check the white balance settings. If using the <b>Auto</b> option, it may take some time for the white balance to be adjusted.
Images are blinking.	If the camera is pointed at the sun or a fluorescent lamp, adjust the camera's angle away.
Lost the admin ID and password and unable to connect to a network camera.	You must perform a factory reset. A factory reset will revert all settings, including network settings, to their factory defaults. After performing a factory reset, make a memo of the admin ID and password as a safety precaution.
Unable to launch WebGuard.	If the WebGuard login screen is not loading, check which version of Microsoft Internet Explorer you are using. WebGuard may not launch properly on versions 8.0 or below.

# **Specifications**

 $\checkmark$ 

These product specifications may change without prior notice.

## Video

	1/2// CMOS
Image Sensor	1/3" CMOS
Max. Resolution	1920 x 1080
Scanning Mode	Progressive Scan
Lens type	Fixed-focal
Focal Length	f=4.0mm/f=2.8mm
Aperture	F2.0/F1.8
Iris Control	Fixed Iris
Angular Field of View	H: 80.3° / V: 43.4° / D: 94.1° (4.0mm)
	H: 110.7° / V: 61.2° / D: 128.6° (2.8mm)
Min. Illumination	COLOR : 0.3 lux
	B/W : 0 lux (IR LED ON)
Dynamic Range	120dB, True WDR
Electronic Shutter Speed	Auto / Manual (1/30 ~ 1/8,000), Anti-Flicker, Slow Shutter(1 ~ 1/5, 1/7.5, 1/15)
Day & Night	IR cut filter with auto switch
IR Distance (LEDs) IR LED supported	20m (4ea)
model only	
Pan/Tilt Range	Pan: -174° ~ 174°, Tilt: 0° ~ 70°

## Network

Video Compression	H.265(MP), H.264(MP), M-JPEG
Bitrate Control	VBR/CBR
Max. Frame Rate	30fps : 1920 x 1080 (WDR)
Supported Resolution	1920x1080, 1280x720, 704x480, 640x360, 352x240
Multi-Video Streaming	Quadruple
Ethernet	RJ45(10/100BASE-T)
Edge Storage* (Optional)	(micro SD/SDHC/SDXC memory card (class 6 or higher, max. 128GB))

\* An SLC (Single Level Cell) or MLC (Multi Level Cell) card by SanDisk or Transcend is recommended to ensure stable recording performance.

\* An SD memory card is a consumable product with a finite service life. Prolonged use will damage the card's memory sectors and result in data loss or memory card failure. Test the SD memory card regularly and replace it whenever necessary.

\* microSD Logo is a trademark of SD-3C, LLC.

## General

Operating Temperature		-10°C ~ 50°C (14°F ~ 122°F) -10°C ~ 45°C (14°F ~ 113°F) (IR LED ON)
Boot Up Temperature		0°C ~ 50°C (32°F ~ 122°F)
Operating Humidity		0% ~ 90%
Power Source		PoE (IEEE 802.3at Class 2)
Power Consumption	IR LED Supported Model	Max. 4.36W
	IR LED Non-Supported Model	Max. 4.01W
Approval		FCC, CE, KC
External Dimensions (Ø x H)		111.9mm x 82mm (4.4" x 3.22")
Packaging Dimensions (W x H x D)		194mm x 149mm x 113mm (7.63" x 5.86" x 4.44")
Weight (Main Unit)	IR LED Supported Model	0.26kg
	IR LED Non-Supported Model	0.25kg
Weight (Packaging)		0.47kg



# **COSTAR VIDEO SYSTEMS**

101 Wrangler, Suite 201 Coppell, Texas 75019 Phone: (469) 635-6800 Fax: (469) 635-6822 Toll-free: (888) 694-7827